



Easy Set Timer

63-1601

Your 6-Digit Dual Timer with Clock, LED Flashing Light and Hi/Low Alarm Sound is a convenient time tool. Its built-in magnet lets you attach it to metal objects, like your refrigerator.

Installing Batteries

Remove the battery insulation before use.

You will need...

One Button Cell Battery (included)

- Remove the battery compartment cover on the back of the timer.
- Insert the battery at an angle as shown in the picture.
- Replace the cover and snap it shut.



Note: After you install the battery, the clock will beep and directly enter the time setting mode. You can use the steps below to set the time or press **MODE** to toggle between time mode and two-timer mode.



Counting Up/Down

Counting Up

- Press **START/STOP** to start counting up. The digits begin running.
- Press **START/STOP** to stop the counting; the hold time appears on the display.
- Press **START/STOP** to restart the counting or you can press **RESET** to reset the time.

Counting Down

To use the timer's countdown function, preset the time first.

- Press **SEC** to set the second digits.
- Press **HR** to set the hour.
- Press **MIN** to set the minute.
- Press **START/STOP** to start the countdown.
- Press **START/STOP** to stop the countdown.


Notes:

- After the timer counts down to zero, the timer will sound an alarm for about one minute, while the LED indicator flashes continuously and then stops. You can press any button to silence the alarm. You can press **RESET** to reset the current timer.
- During the designated countdown time, the timer beeps at the 10-minute and five-minute marks.

Resetting/Mounting

If the timer stops working properly, you may need to reset the timer. Insert a slender object (straightened paper clip) in the **RESET** hole on the back of the timer under the volume switch. The timer will enter the time-setting mode directly.

The timer has a built-in magnet that allows you to mount it to any metal surface.

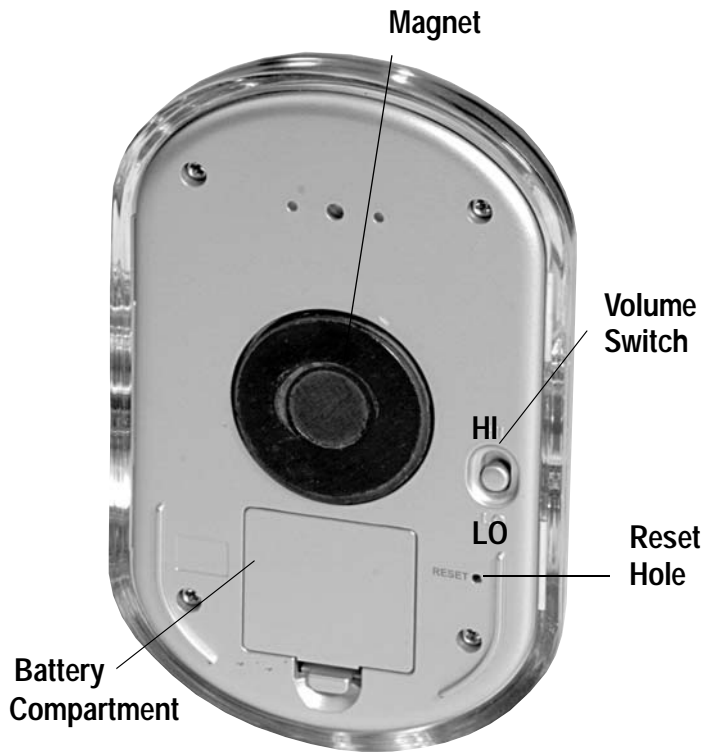

Setting the Time

- Press and hold **MODE** for about three seconds to enter the setting mode. The hour digits flash.
- Repeatedly press **SEC** to select the 12-hour or 24-hour display format. **A** (AM), **P** (PM), or **24** (24-Hour) appear in the display.
- Repeatedly press **START/STOP** to select the hour digits or minute digits. The selected digits flash. When you select the minute digit, press **SEC** to set the second digit to zero.
- Repeatedly press **HR** to set the first digit for the hour or minute. Then, repeatedly press **MIN** to set the second digit of the hour or minute.
- Press **MODE** to exit the setting mode.

Note: The timer automatically corrects wrong settings. For example, if you set the hour to 13 in the AM setting. The clock will reset it to 1 p.m. automatically.



Using the Timer


The two Timer Modes function the same and allow you to use two timers at the same time.

- Repeatedly press **MODE** to select Timer Mode 1 or Timer Mode 2 and show 00m00s on the display.

If you select Timer Mode 1,  appears on the display.

If you select Timer Mode 2,  appears on the display.

The range of the timer is up to 99:59:59.

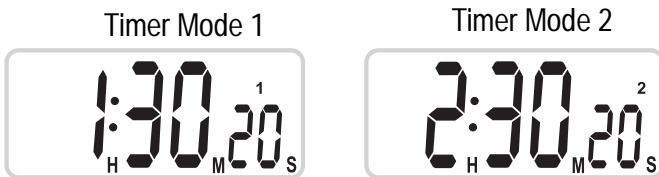

Care

- Keep the timer dry. If it gets wet; wipe it dry immediately.
- Use and store the timer only in room temperature environments.
- Handle the product carefully; do not drop it.
- Wipe the timer with a damp cloth occasionally to keep it looking new.
- If your timer is not operating properly, take it to your local RadioShack store for assistance.

Specifications

Power..... 1 CR2032 Button Cell Battery
Battery Life..... 12 months (approximately)
Unit Size 110x70x16mm

Specifications are typical; individual units may vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for [one (1) year] from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99